

INSTALLATION GUIDE


Model REMFC Remote Feed Canopy
(For use with Besa low voltage lighting systems only)
REMFC, Rev.4 2-09

 **BESA LIGHTING**
6695 Taylor Rd. Blacklick, OH 43004
www.besalighting.com

Caution: Turn off power to electrical box before installing

Installation of Canopy:


1. Loosen Canopy Set Screws to release Mounting Plate.
2. Secure Mounting Plate to the electrical Supply Box using Machine Screws.
3. Connect the Low Voltage Wires from the Supply Box to the Canopy Low Voltage Wires, then secure with wirenuts.
4. Carefully push the wirenuts and Low Voltage Wiring back into the Supply Box, then position the Canopy up to the ceiling.
5. Tighten the three (3) Set screws until the Canopy is secure to the ceiling.
6. The monorail can now be connected to the canopy.

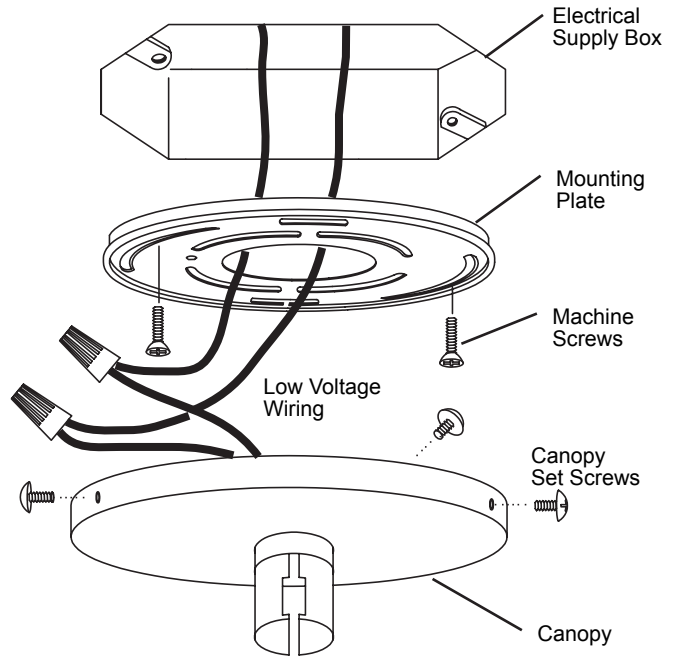

NOTE:

For applications where the monorail is not directly below the canopy, utilize the flexible feed provided.

Installation of Monorail:

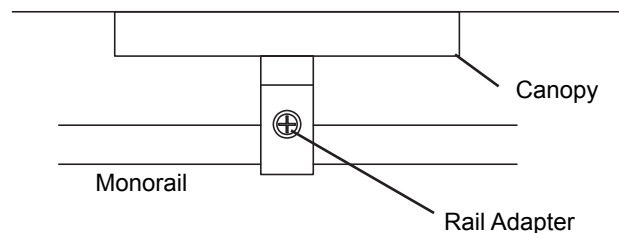

1. Loosen Set Screw on the Rail Adapter of the Canopy.
2. Raise the Monorail into the Rail Adapter, then tighten Set Screw.
3. Turn on power to system.

Operate system for 5 minutes, then verify that the connections are running cool to the touch.